

Control 4 Driver Instructions

Please follow the steps before using the Control 4 driver

Download driver as required from Control4 driver page [here...](#)

- Under Settings → System → Advanced Settings
 - ⇒ "Auto init mode"
- Under Settings → Connection → Network
 - ⇒ "Wake on Wireless Network"
 - ⇒ "Wake on LAN"
- Under Settings → System → Advanced Settings → Power On mode
 - ⇒ "Power On"
- Under Settings → Connection
 - ⇒ "Control4 Control Port"
- Under Settings → Support → Disclaimer and Privacy → Data Sharing
 - ⇒ "Select All" then "Agree"

Following these steps FTE will be triggered automatically.

Note 1: If the software has been updated via USB please reset to factory default first.

FTE trigger is within Settings → Support → Reset to Factory Default

Note 2: When powering off completely, please allow 15-20s once plugged back in, for network handshaking to occur. Control 4 should then work again.

