



Installation Bulletin

Recommended Settings for Marantz Model M4



Installation Bulletin – Recommended Settings for Marantz Model M4

Power Settings

Please take note of page 45 in the Owner’s Manual of the Marantz Model M4. In order to have permanent usage of the unit either via the HEOS app or by a control system, it must be set to ‘Quick Start Mode’.

If this is not enabled, the M4 will enter a Deep Standby Mode after 20 minutes of inactivity. It can only be woken from this mode by pressing the standby button on the front of the unit.

Power management

■ Deep Standby

To save power, the device will automatically enter “Deep Standby Mode” whenever there is no playback for 20 minutes. Power indicator will turn off during Deep Standby. To “wake” this unit from Deep Standby, you must press the standby button which will immediately turn on power indicator.

Please note that HEOS and other network connections cannot be operated until reconnected after bootup.

■ Off

To completely turn off the power to the device you must switch to OFF of power switch on rear panel.

■ Quick Start Mode (Optional)




To save boot up time, the device can be put into a “Quick Start Mode”. In the Heos App, go to the “Device” and then select “Power Management” and select “Quick Start Mode”. The wired connections remain on while in Quick Start Mode.

Please note that this setting will use more power.

To determine which power mode has been configured, please check the LED display on the front panel.

Status LED table

The LEDs on the front panel change to indicate the current status.

Status	Front LED action	Description
Deep Standby Mode	 <p>(off)</p>	Power is off, or this unit is in Deep Standby Mode. (☞ p. 45)
Quick Start Mode (User selectable)	 <p>(dimmed solid)</p>	This unit is in Quick Start Mode (Connected to your network). (☞ p. 45)
	 <p>(dimmed solid)</p>	This unit is in Quick Start Mode (Not connected to your network). (☞ p. 45)